


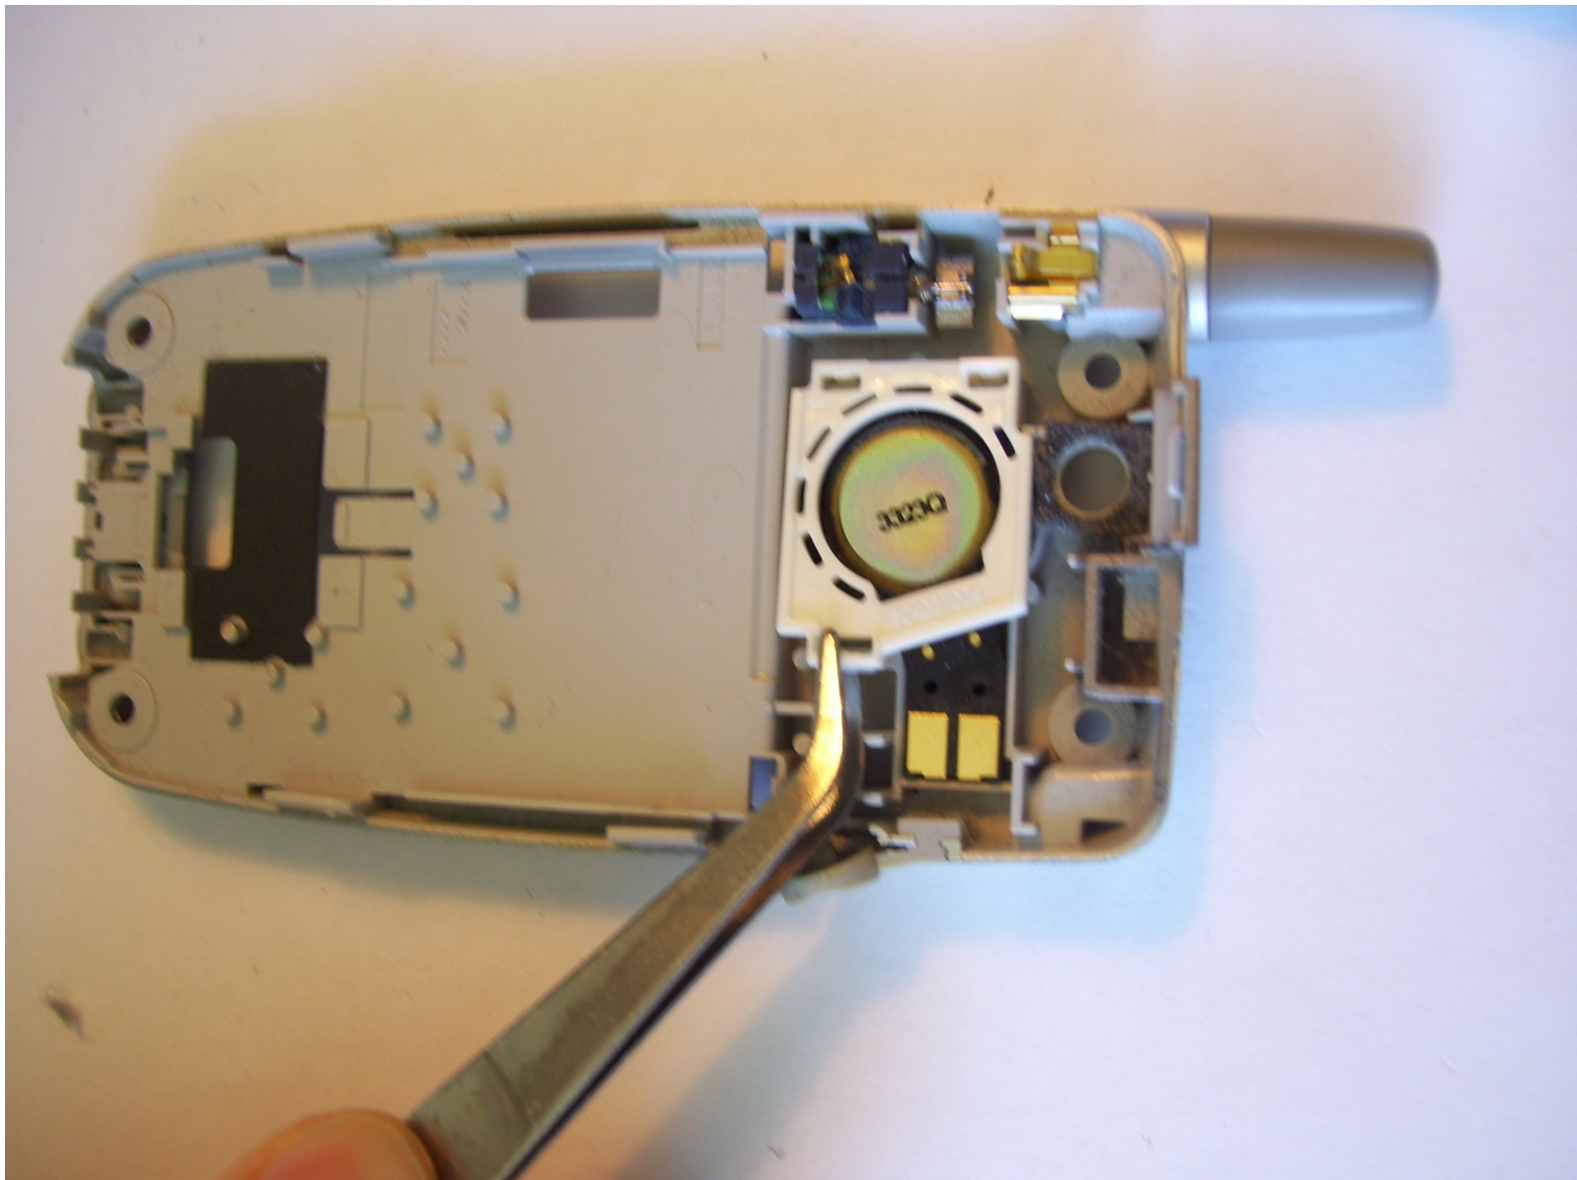

Disassembling Panasonic GU87 Back Speaker

How to disassemble the speaker from the phone

Written By: Van






TOOLS:

- [Tweezers](#) (1)
 - [Tri-wing Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

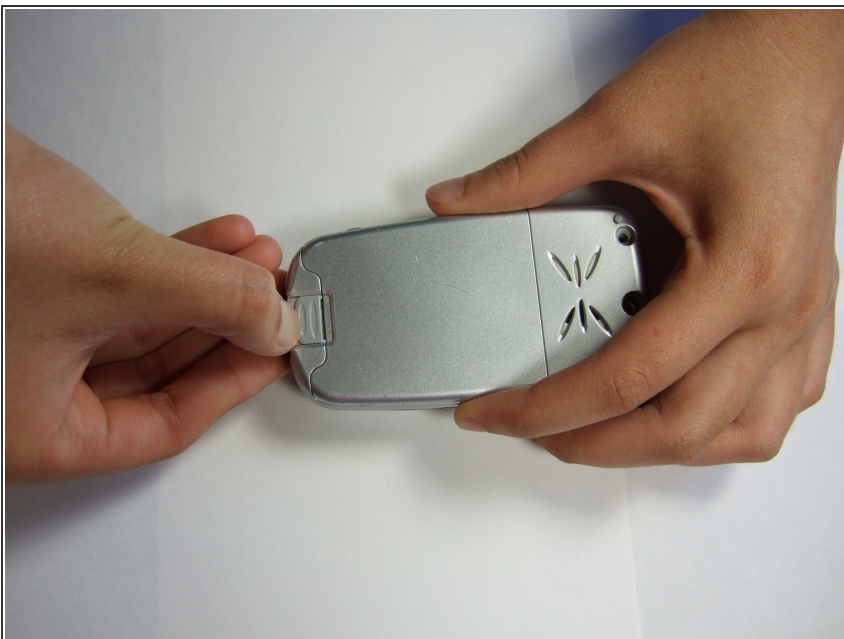

- Place your hands on the phone as shown in picture. Slightly pull the tab away from the phone with your thumb.

Step 2



- Lift the battery up from the phone as shown. Replace with a new battery if the old battery has become worn out.

Step 3 — Back cover




- Remove the rubbers with a tweezers.

Step 4




- Remove the 4 screws as shown in the picture

Step 5

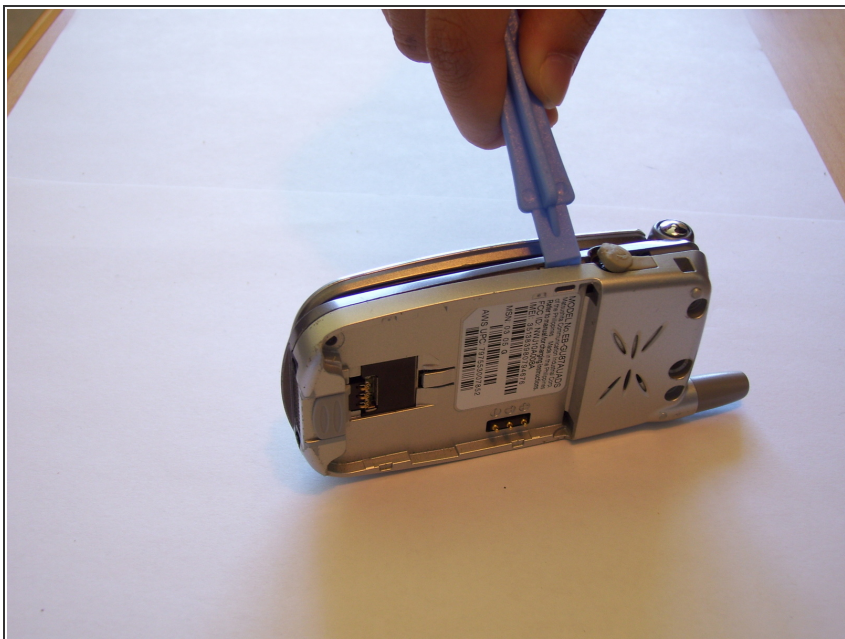


- laid it on a side, use the tool to separate the front and back.

Step 6

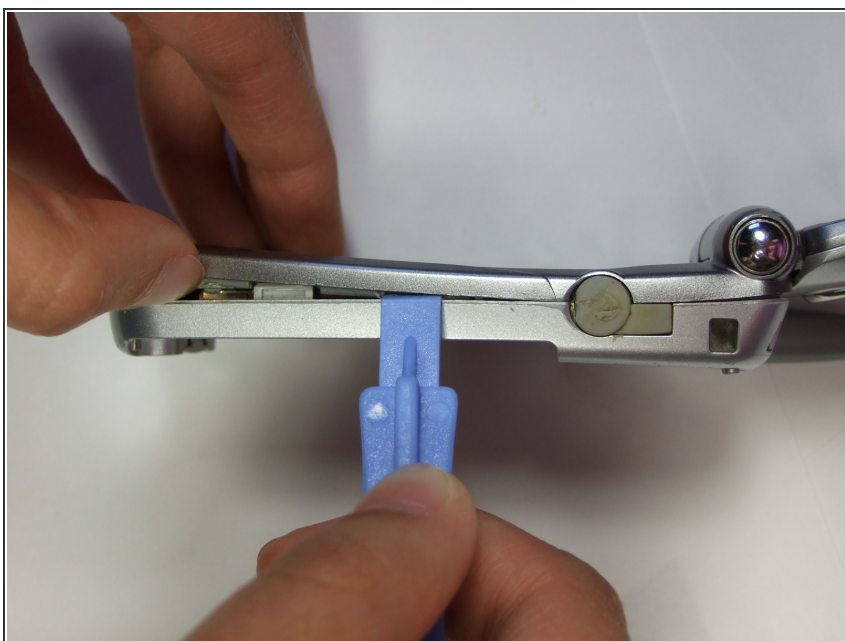


- Put the tool in friction tabs and force down to open the cover as shown in the picture
- Pop it open using your thumbs

Step 7 — Back Speaker

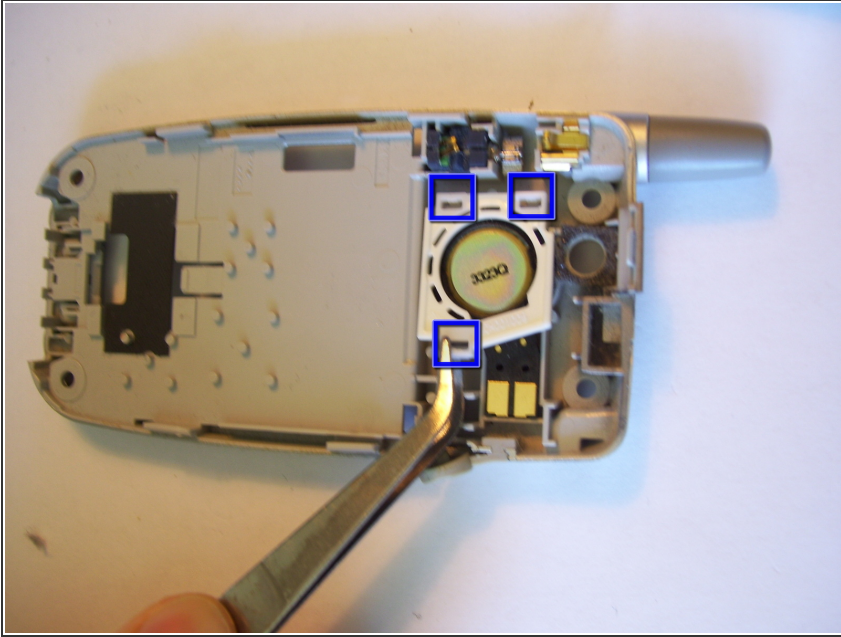

- Remove the three tabs on the white plastic square.
- Lift the square plastic out from the speaker to remove

Step 8

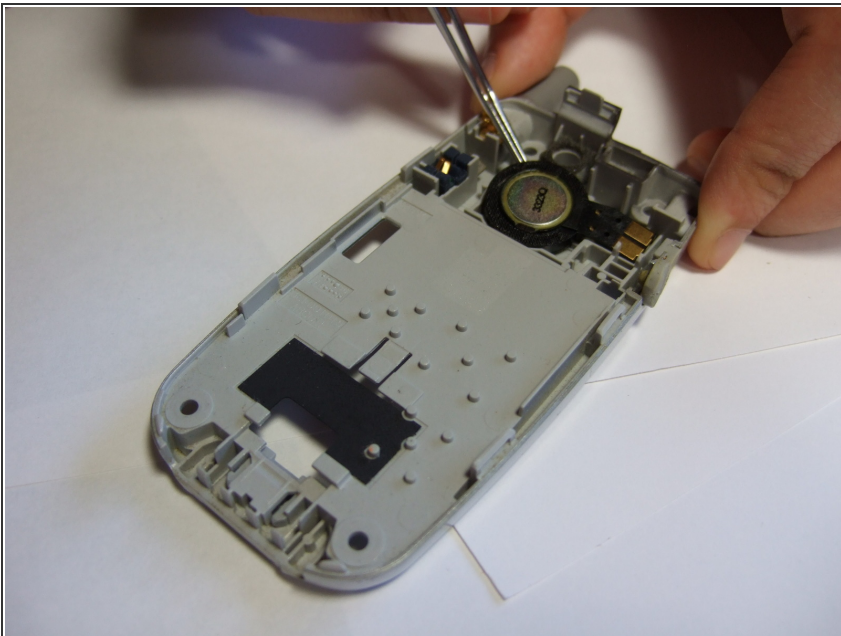

- Use the tweezers to lift the speaker up

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-30 02:26:30 AM.